


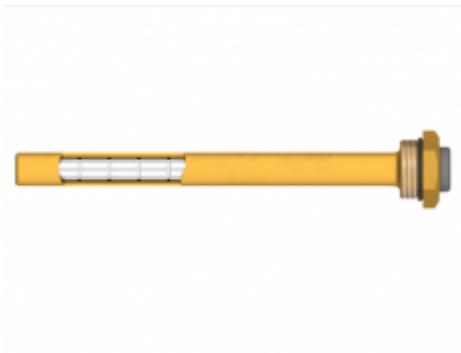

MAGNETIC INSERT



The **magnetic insert** is used to capture metal particles, preventing contamination from settling in the installation.

parameters	Value
------------	-------