



 








INDEX	NAME		CATALOGUE NUMBER	DRAWING
UNIVERSAL ELEMENTS				
T 9000 01 88 00	Roof plate with air intake (for system Φ 60 use adapter PP -T 9000 01 84 00)	ϕ 80	ZB80SCHAPP	
T 9000 01 89 00	Angular roof plate 25° - 50°	ϕ 125	ZB125UBPS	
T 9000 01 90 00	Roof plate (plastic)	ϕ 80	ZB80SCHA	
T 9000 01 99 00	Roof plate (aluminium)	ϕ 125	ZB125FDK	
T 9000 01 91 10	Location bracket	ϕ 60	06071SWP	
T 9000 01 91 00		ϕ 80	08071SWP	
T 9000 01 92 00	Rosette	ϕ 80	830BG	
T 9000 01 93 00		ϕ 100	830CG	
T 9000 01 94 00		ϕ 125	830DG	
T 9000 01 95 00	Gasket	ϕ 60	31060	
T 9000 01 96 00		ϕ 80	31080	
T 9000 01 97 00		ϕ 100	31100	
T 9000 01 98 00		ϕ 125	31125	
T 9000 01 68 10	Flexible pipe - WHITE	ϕ 60	24060B	
T 9000 01 68 00		ϕ 80	24080B	
T 9000 01 84 00	Adapter PP	ϕ 60 x ϕ 80	366080	
In case of purchase the boiler without adapter with measuring points, the adapter should be bought separately				
T 9000 02 10 00	Adapter set to separate system: - Flue gas adapter with measuring points and collar on the boiler (condensing boilers) - Air adapter with measuring points and collar on the boiler (condensing boilers)	2 x ϕ 80	ADS 512/80MAL ADP 503/80MAL	
T 9000 01 12 00	Coaxial adapter with measuring points and collar on the boiler	ϕ 60/100	ADK 512/60	
T 9000 01 13 00	Coaxial adapter with measuring points and collar on the boiler	ϕ 80/125	ADK 512/80	